

H02 Series

Single Threshold Hinged Door

INSTALLATION MANUAL


IMPORTANT

Updated: 2021/02/03


- Thoroughly inspect your product before proceeding with the installation.
- The warranty will be void if the product is installed with a conspicuous defect.

CAUTION


- To prevent leaks, silicone must be applied on the outside of the shower and not on the inside!
- Read all instructions carefully before starting the installation.
- Save this manual for future reference.

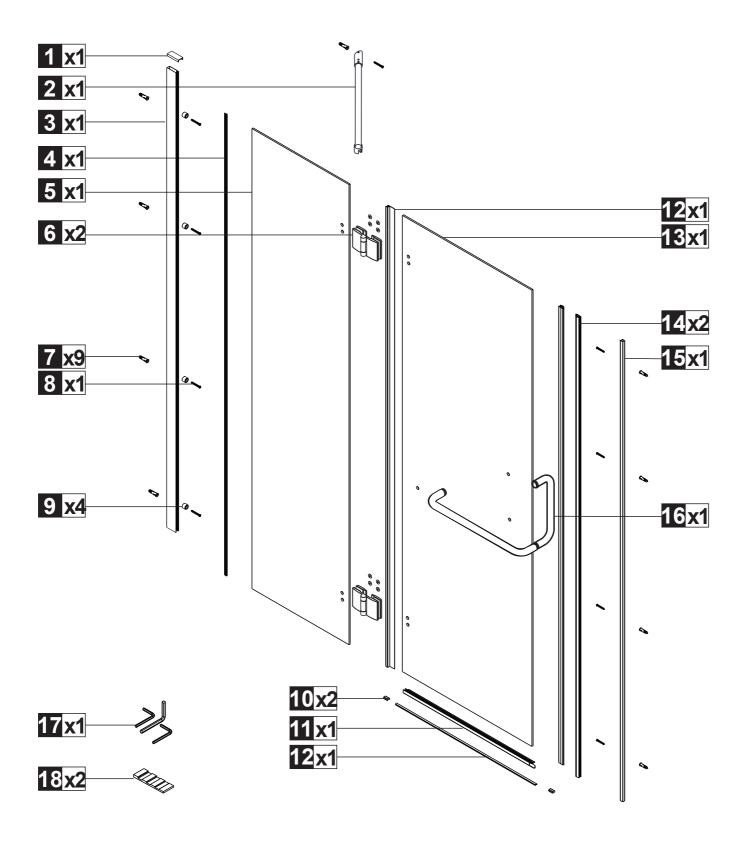


PARTS LIST FIXED PANEL

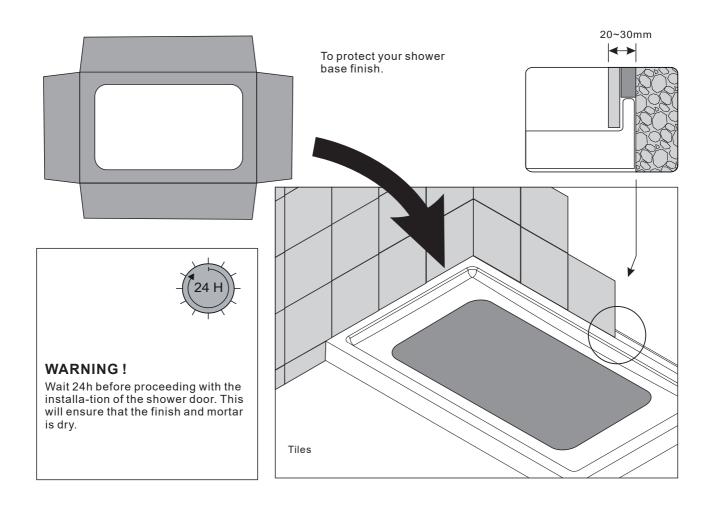



TOOLS AND MATERIALS REQUIRED

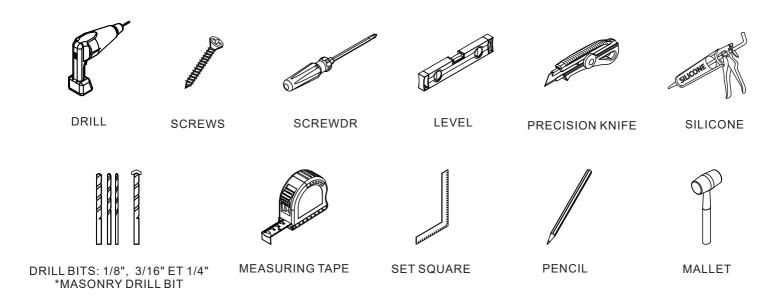


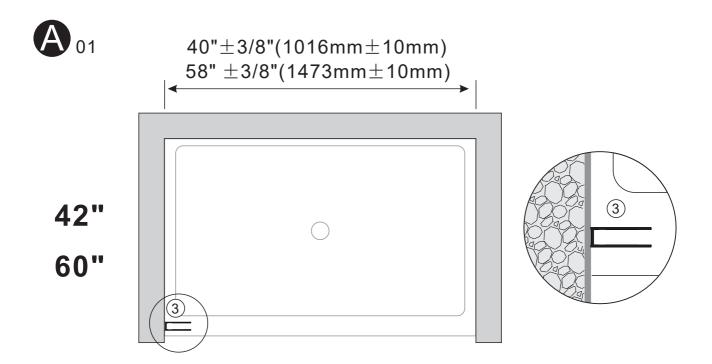


WALL JAMB INSTALLATION

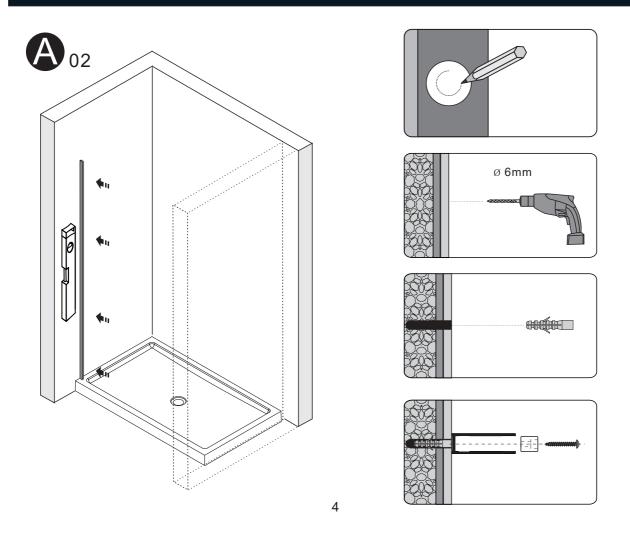


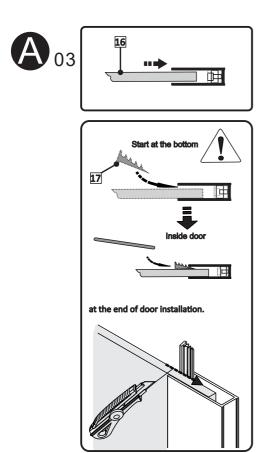

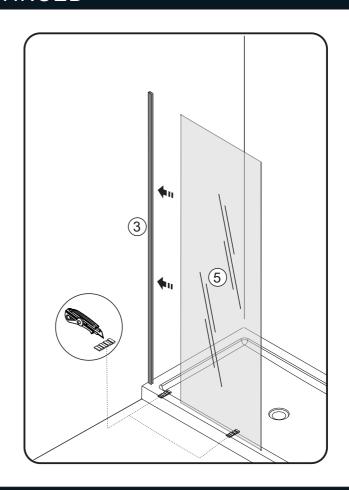



CONTINUED

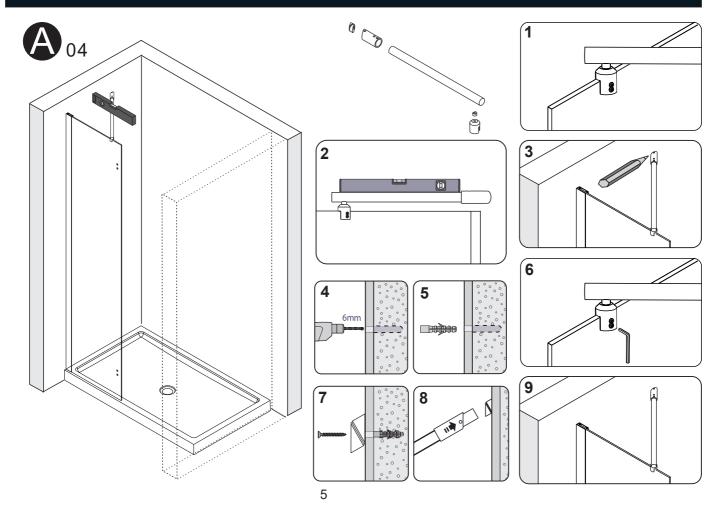

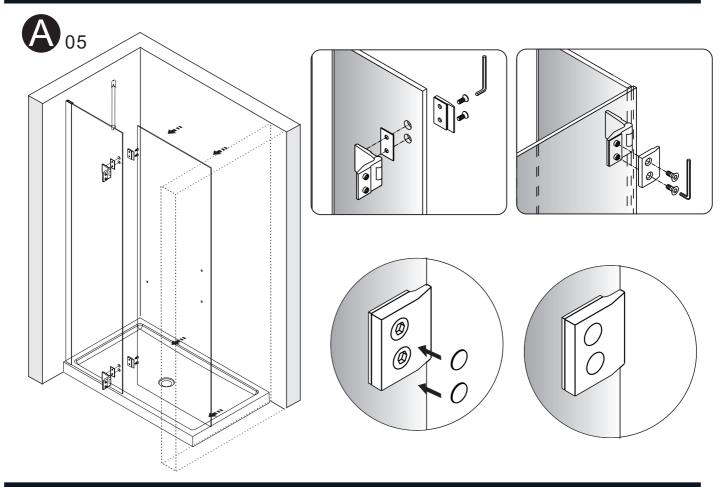


CONTINUED

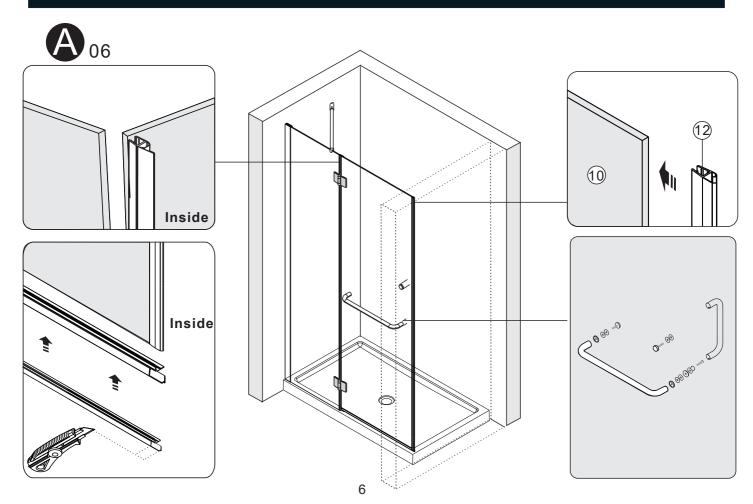

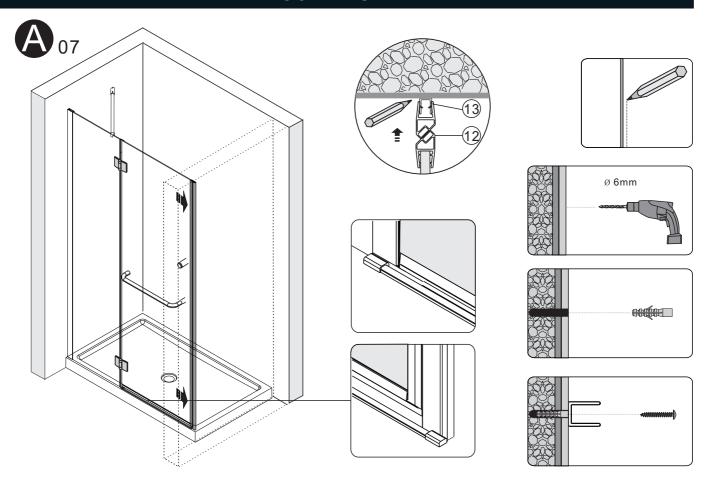


CONTINUED

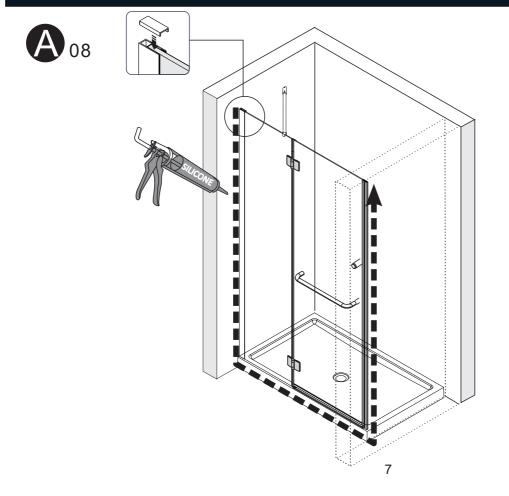





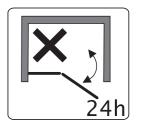





Acritec Industries Corp.

27049 Gloucester Way Langley, B.C. V4W 3Y3

Tel: 604.607.0856 Fax: 604.607.0857

Email: info@acritec.com

Website: www.acritec.com