



WALK-IN TUB

Integrity with Hydraulic Seat

Installation Manual

Pre-installation Instructions

WARNING: When using this tub, the following basic precautions should be followed:

- Avoid the risk of electrical shock. Connect only to a circuit protected by a ground-fault circuit-interrupter(GFCI). Grounding is required; All electrical connections should be made by a licensed electrician, in accordance with requirements of national electrical codes and procedures.
- **INSTALLER/OWNER BEARS ALL RESPONSIBILITY TO COMPLY WITH ALL STATE AND LOCAL BUILDING CODES.**

TESTING YOUR WALK-IN TUB BEFORE INSTALLATION BY FOLLOWING PROCEDURES


1. Before unpacking the unit, please inspect the carton carefully for any damage. Any damage, please take a picture or record all damage carefully. If necessary, contact your dealer/distributor immediately to file a freight claim.
2. Unpack the carton, then inspect the carton carefully for any damage and check if all the spare parts are there. If there is any damage, please take a picture or record all it carefully. If necessary, contact your dealer/distributor immediately
3. Water test before installation, although all our walk-in tub are water tested before they leave our factory.
 - a. Place the tub on a flat surface in an area where it may be drained after testing .
 - b. Close the door, fill the tub with water to the overflow and allow standing for a few minutes to inspect the tub for only leaks.

IMPORTANT: Failure to follow the pre-installation Instruction and water test the bathtub before installation, manufacturer will not be liable for the removal or installation of the bathtub.

Installation Procedures

1. The bottom of the tub is installed with the leveling feet.

Note: It is important that all leveling feet are completely touching the floor.

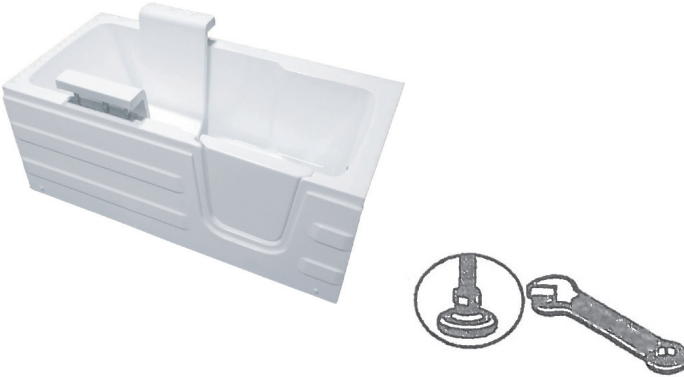

Plug the power cord into GFI outlet to energize the system.


Lifting operation instructions

Press and hold the up or down buttons on the remote control provided




Step to install / remove the seat

Install procedures

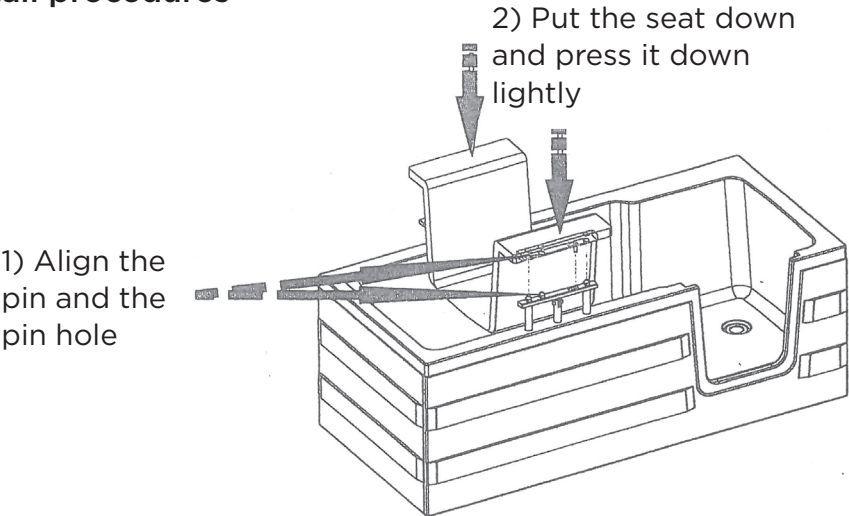

Removal procedures

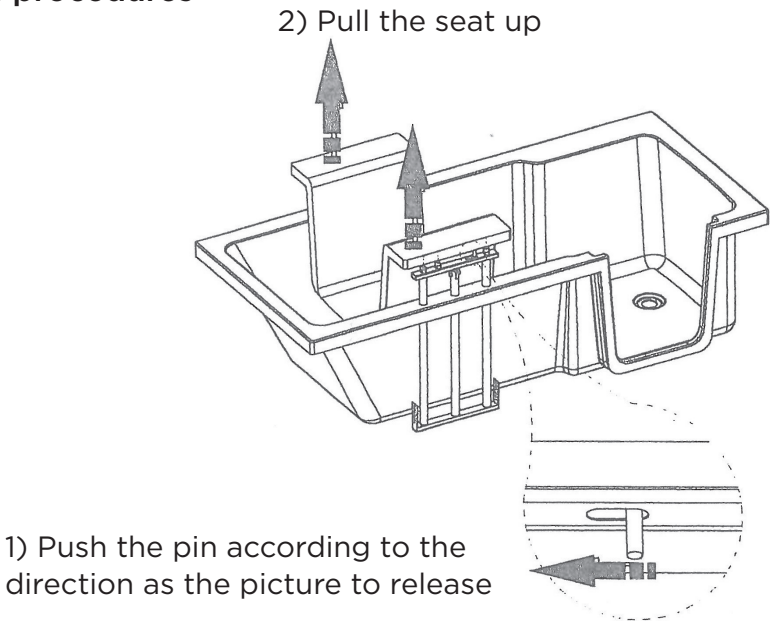

The caps to be used if the seat is removed and not used.



Operating Safety Instructions

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

WARNING: When using this unit, following basic precautions should be followed.

1. Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
2. Never operate electrically connected devices in or near the bath. No electric appliances should be within 5 feet/1.5 meters of this bathtub (such as hair dryers, lamp, telephone, radio, television and so on.)
3. You need one ground fault circuit/ power supply for the hydraulic seat.
4. If you have an Air Jetted System, you will need 2nd circuit/ GFI.
5. If you have an Air Jetted System, the blower has to have access to the free air, preferable 4"x4" opening.
6. You will need the access to the electrical connection, shown in the picture on the right:




7. Battery pack is always charged. In case of temporary power failure, the hydraulic seat still can be used with a limited number of cycles. Generally used in emergency.



CAUTION: DO NOT USE HARSH ABRASIVES OR SOLVENTS TO CLEAN THIS PRODUCT.

Hydraulics Specifications

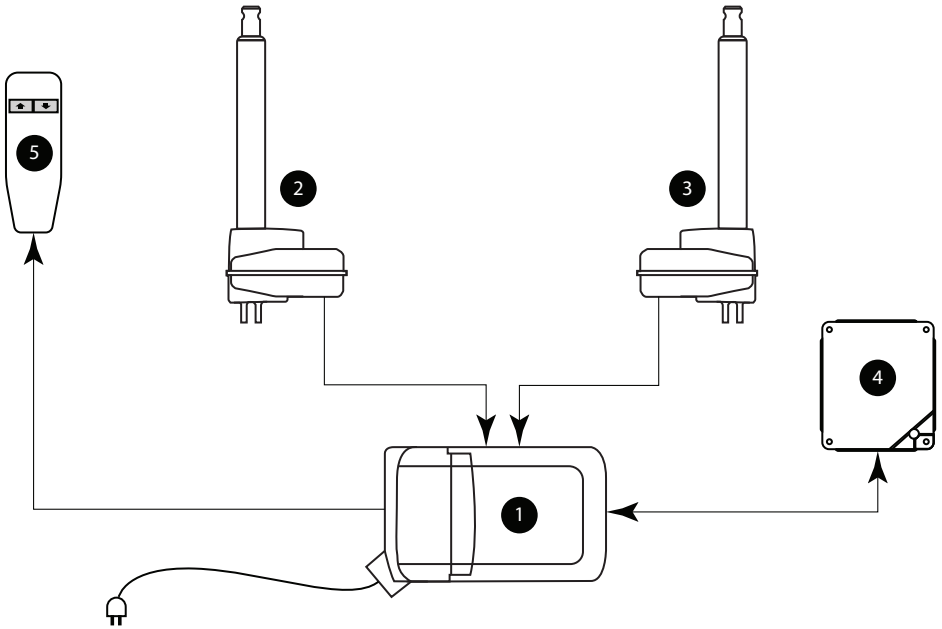

1 - Control Box

U in : 100 - 240 V , 50/60 Hz

2&3 - Hydraulic Pumps (L / R)

Power Rate: 24 V , Max. 2.6A

4 - Back-up Battery

Capacity : 1.3 Ah 24V

Charges via Control Box with integrated charging circuit

5- Remote Control

Enables easy control of hydraulic Pumps

Operating Procedures

Inward opening door lock

To close the door:



press the door handle downward

To open the door:

lift up the handle, open the door

Notice

- 1. The water tight system is well-design, as you do not need to press door handle downward with too much force, so that you can lift up the door handle easily when you open the door.
- 2. Before filling the water into the tub, please make sure that the bathtub door is locked tightly. Failure to do so will result in water leakage. Close the drain plugin.
- 3. Before opening the door lock, please make sure that the water has been drained completely.

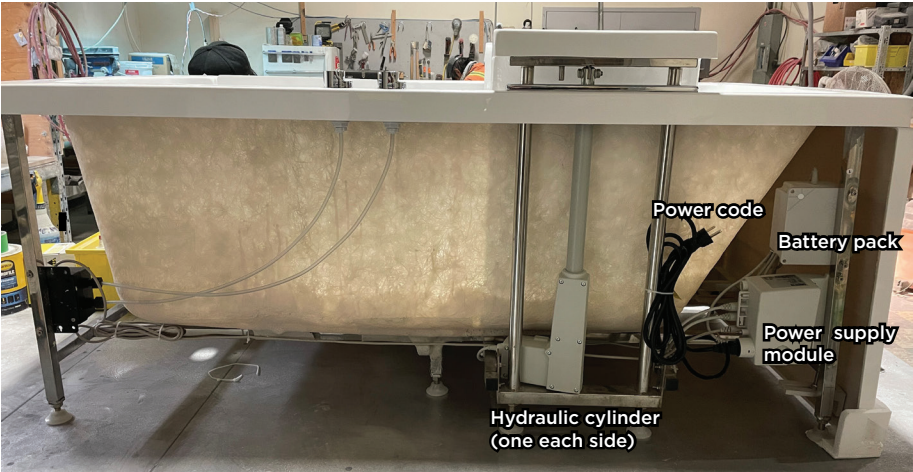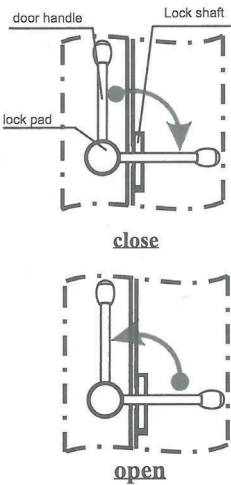

SYMPTOMS : Door leaks slightly

PROBLEM:

1. Door lock is not closed tightly;
2. There is some debris on the door seal.


SOLUTIONS :

1. Close the door lock tightly;
2. Clean the debris on the door seal.

Extension Panel


To utilize the Integrity bathtub as an alcove model, the extension panel is designed to ensure sufficient space for the tiling flange, tiles, drywall and for the hydraulic seat to operate vertically without obstruction.

Please adhere to the following instructions:

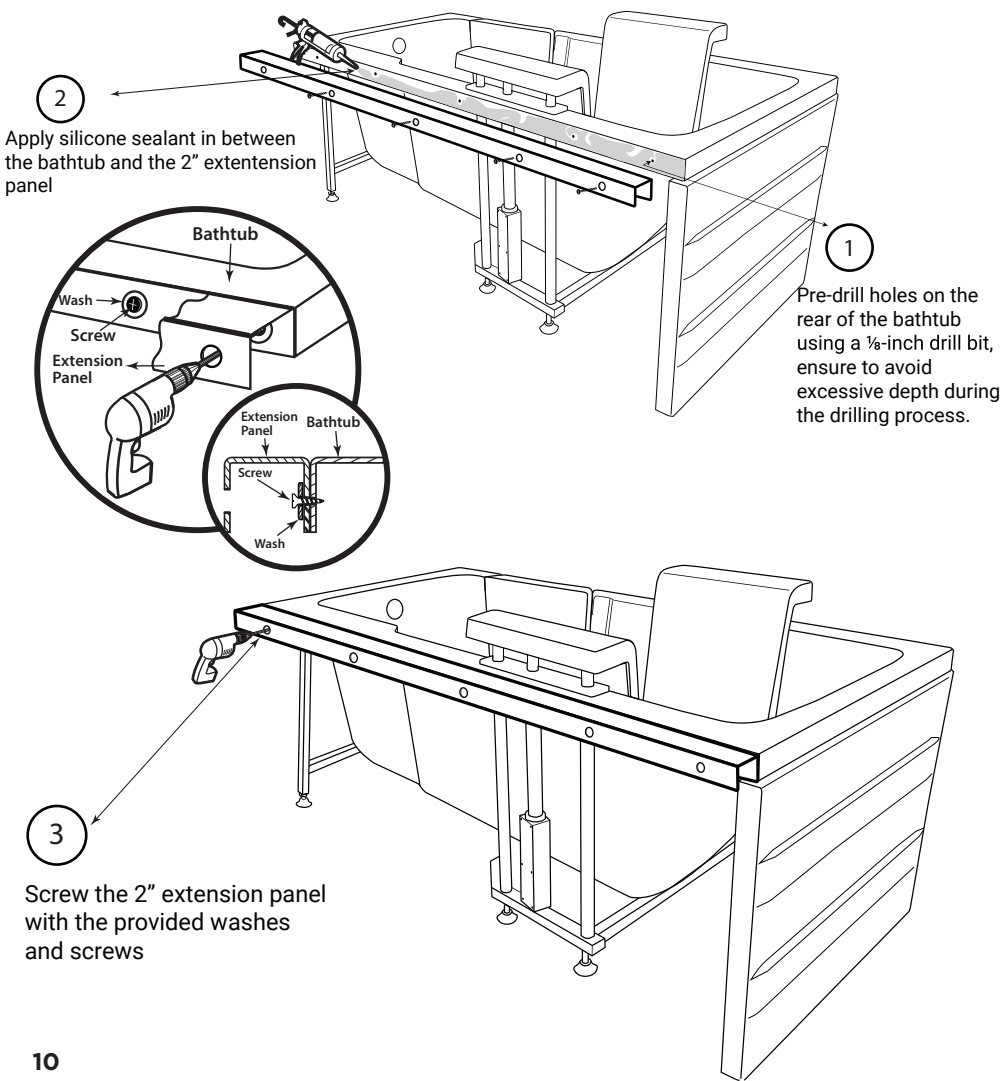


Tiling Flange Installation

(sold in 12-foot lengths only)

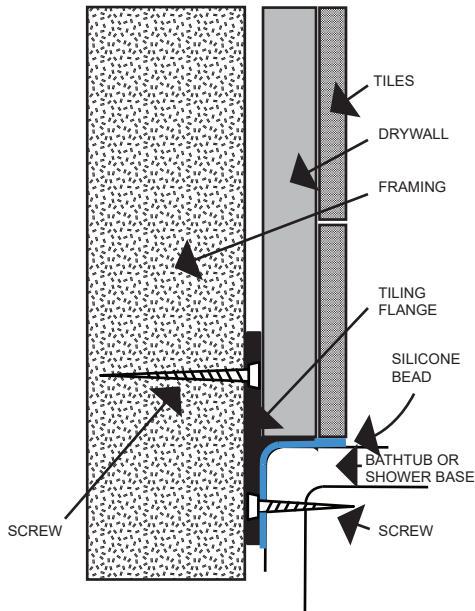

TOOLS AND MATERIALS REQUIRED

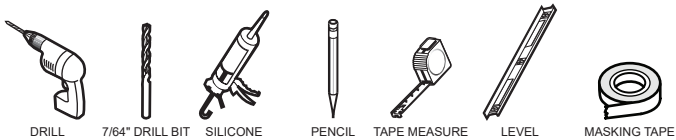

*Note: Colours used in the illustration do not reflect the actual product colours.

- Drill pilot holes every 12 inches or less on the tiling flange. This ensures that the flange does not pull away from the 2" extension panel attached to the bathtub and the silicone bond is not compromised when screwed
- Ensure that the tiling flange, 2" extension panel and bathtub are free of all dust, oil, debris, or any other surface film prior to applying the silicone.

- Apply silicone sealant to the entire flange surface that will contact the bathtub and the 2" extension panel.
- Position the tiling flange on the 2" extension panel and temporarily secure in place with masking tape.
- Fasten the tiling flange to the extension panel with #6 1-inch screws. Use #6 x 1½-inch screws to fasten the tiling flange to the framing.
- Allow silicone sealant to fully set then remove any excess, check for gaps and touch up as necessary.

The balance of the installation (gyproc, finishing material, tile) would be done as with a standard bathtub.

If you are going to be installing faucets, grab bars or additional hand-held showers, be sure to put in the necessary backing to make the final installation easy.

**** Note: We highly recommend that the faucet you install has a thermostatic control to avoid any accidental scalding from water that is too hot.

Your walk-in bathtub door has a silicone gasket that needs no maintenance, but should be kept clean and thoroughly wiped down after every use. We recommend that the bathtub door be left open after every use to avoid constant pressure on the gasket.

Reasonable care and maintenance should give you years of enjoyment from your bathtub.

SALES & WARRANTY INFO:

Toll free: 1.877.464.3100

Tel: 604.607.0856

Fax: 604.607.0857

Email: customerservice@acritec.com

Website: www.acritec.com



CONDITIONS APPLICABLE TO ACRI-TEC'S WARRANTY

1. The warranty card must be returned to Acri-tec within 30 days from installation.
2. The product must be installed and maintained in accordance with the installation, operation and maintenance instructions provided.
3. Misuse or abuse of product is not covered under warranty.
4. Acri-tec's warranty is limited to the supply of a replacement product of comparable size and style. It does not include any cost of transport, removal or installation.
5. Colour fading is not a material defect.
6. Acri-tec is not responsible for everyday wear or tear that may occur.
7. Under no circumstance shall Acri-tec be liable for any direct, or consequential loss, or damage arising out of the use of this product.
8. The plumbing fixtures must be tested prior to final installation to ensure no leaks have resulted from shipping and handling.
9. Except as expressly provided, there shall be no Warranty or obligation, expressed or implied, oral or statutory, and in no event shall Acri-tec, its agents or employees be liable for injury to any person, for any claim of damage, however arising.

SALES & WARRANTY INFO:

Toll free: 1.877.464.3100

Tel: 604.607.0856

Fax: 604.607.0857

Email: icustomerservice@acritec.com

Website: www.acritec.com



NAME _____

ADDRESS _____

CITY _____

PROVINCE _____ POSTAL CODE _____

E-MAIL ADDRESS _____

BATHTUB SERIAL # _____

MODEL # _____

DATE OF PURCHASE _____

INSTALLATION DATE _____

INSTALLER _____

PLEASE CHECK THE APPROPRIATE BOX:

☐ NEW CONSTRUCTION

☐ RENOVATION

WHERE WAS YOUR ACRI-TEC PRODUCT PURCHASED ?

STORE _____

CITY _____



Acritec Industries Corp.

27049 Gloucester Way
Langley, B.C. V4W 3Y3

Tel: 604.607.0856

Fax: 604.607.0857

Email: customerservice@acritec.com

Website: www.acritec.com