



Undermount Tub Installation Instruction

There are three following ways to instal an under mount tub.

The edge of the tub is designed to have a slope to make sure water will flow down to the inside of the bathtub. The deck will NOT sit right on the edge of the tub. The gap between the bottom of the deck and top of the edge is about 1/16" to 1/8".

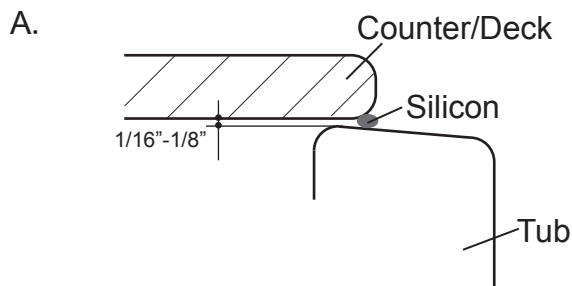


The deck is close to the outside edge.

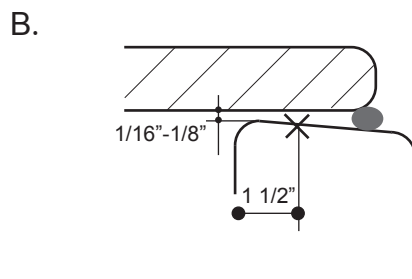

The deck is close to the inside edge.

The gap for silicon will be too wide as for the 1/16"-1/8" gap has to be kept.

If you choose this installation, we can trim the edge about 1 1/2" if you desire.

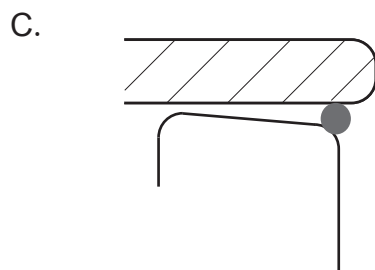

The deck is above to the edge of the tub.

The silicon will not be visible. Just apply the silicon for seal.