

## Installation Manual / Manuel d'installation

### IMPORTANT

- Thoroughly inspect your product before proceeding with the installation.
- The warranty will be void if the product is installed with a conspicuous defect.

### CAUTION

- To prevent leaks, silicone must be applied on the outside of the shower.
- Read all instructions carefully before starting the installation.
- Save this manual for future reference.















### IMPORTANT

- Inspecter le produit avant de procéder à l'installation.
- La garantie sera invalide si le produit a été installé avec des défauts apparents.

### ATTENTION

- Lors de l'installation, l'application de silicone doit être à l'extérieur de la douche.
- Veuillez lire attentivement ce manuel d'instruction avant de commencer l'installation.
- Conserver ce manuel pour référence ultérieure.

# PARTS LIST

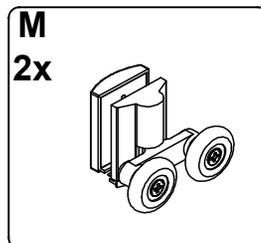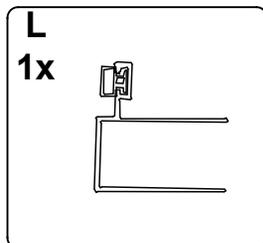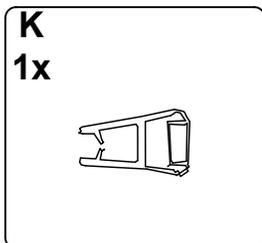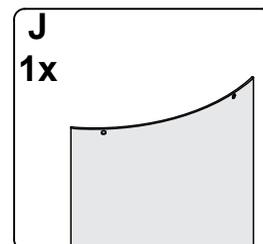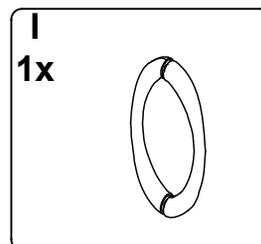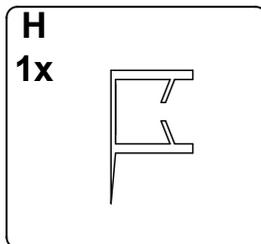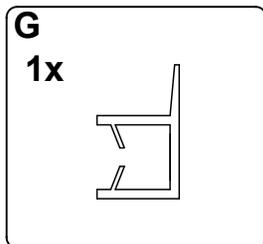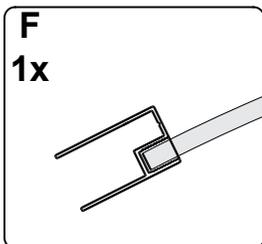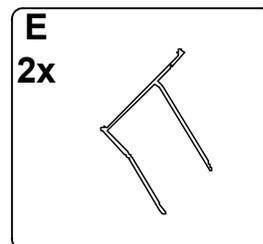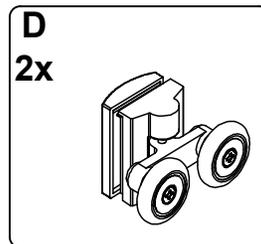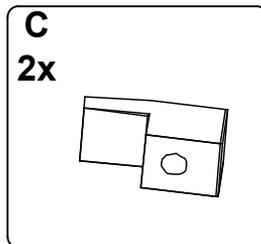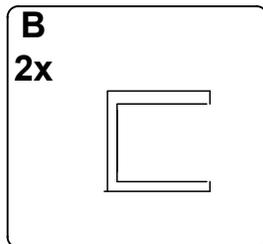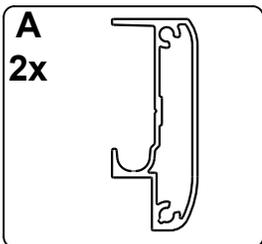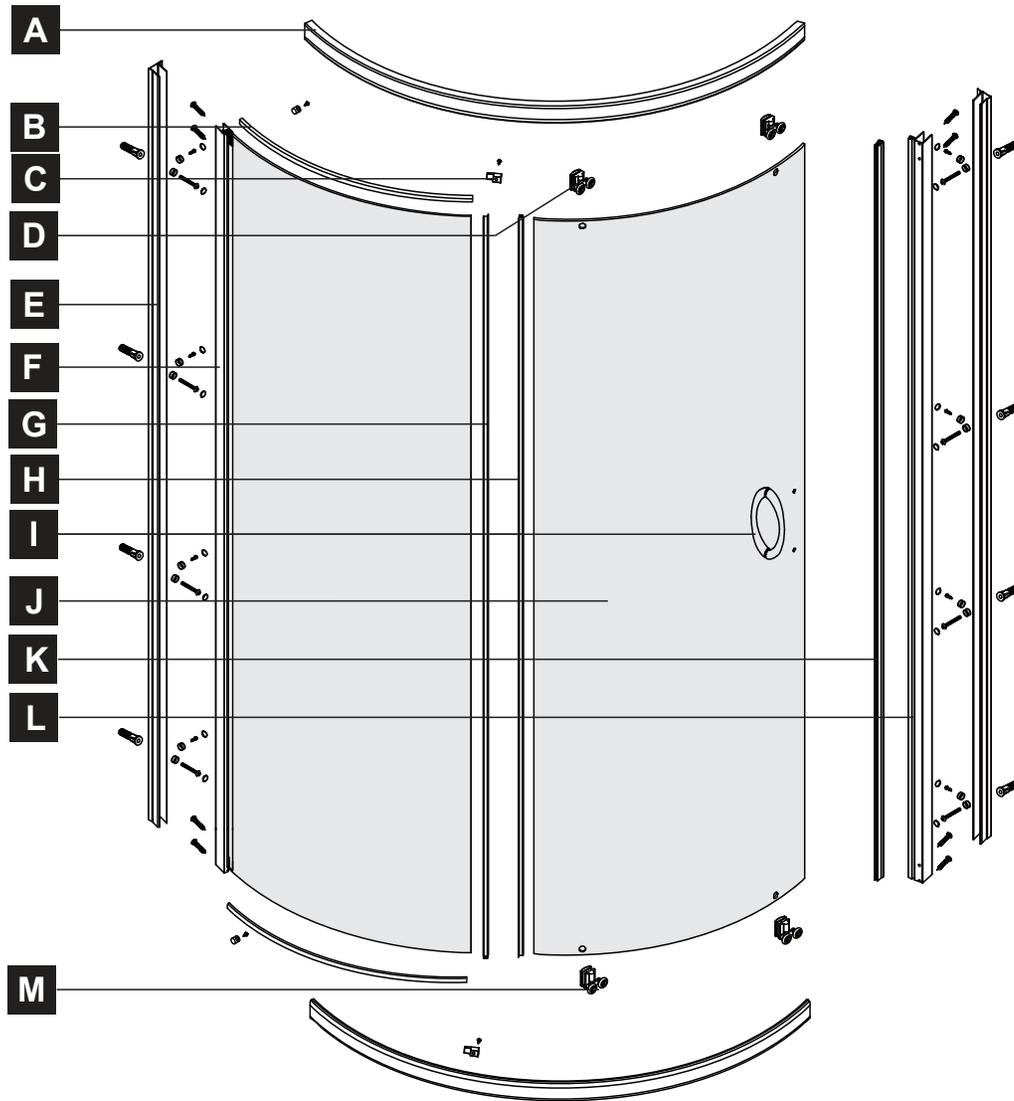


# HARDWARE CONTENT

AA




Screw  
ST4×45  
Qty.8

BB



Screw  
ST3.5×25  
Qty.8

CC



Wall plug  
ø6×30  
Qty.8

DD



Screw  
ST4×14  
Qty.2

FF



Screw  
ST4×13  
Qty.6

HH



Screw cap  
Ø13.4  
Qty.14

II




Washer  
Ø10.9  
Qty.14

JJ




Screw  
M4×16  
Qty.9

KK



M4  
Qty.9

LL




M4  
Qty.18

MM




Screw  
ST4×12  
Qty.6

# SITE CHECK

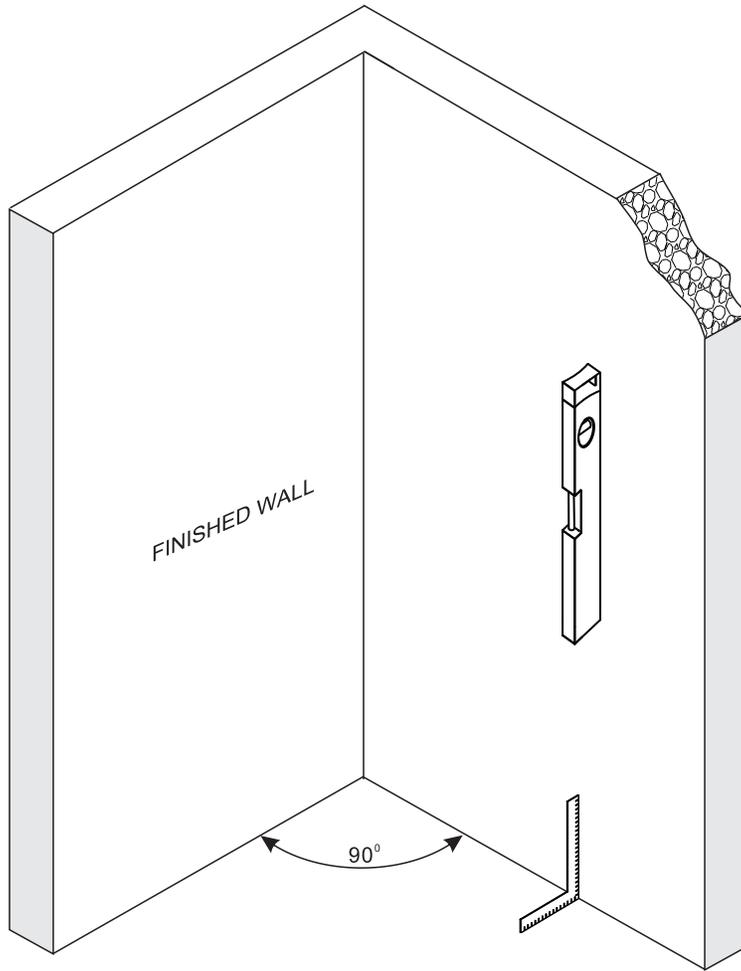


## TOOLS AND MATERIALS REQUIRED

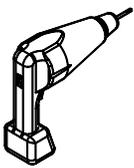


DRILL



SCREWS

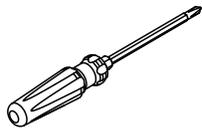

SCREWDRIVER

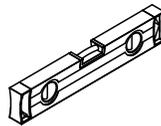


LEVEL




PRECISION KNIFE




SILICONE



DRILL BITS: 1/8", 3/16 1/4"  
\*MASONRY DRILL BIT

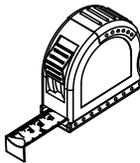


MEASURING TAPE



SET SQUARE



PENCIL




MALLET


# SHOWER REVERSIBILITY

- These instructions illustrate an opening from right to left (see illustration A ).
- For an installation from left to right (see illustration B), use the same instructions, but switch around the panels: mirror effect.

A

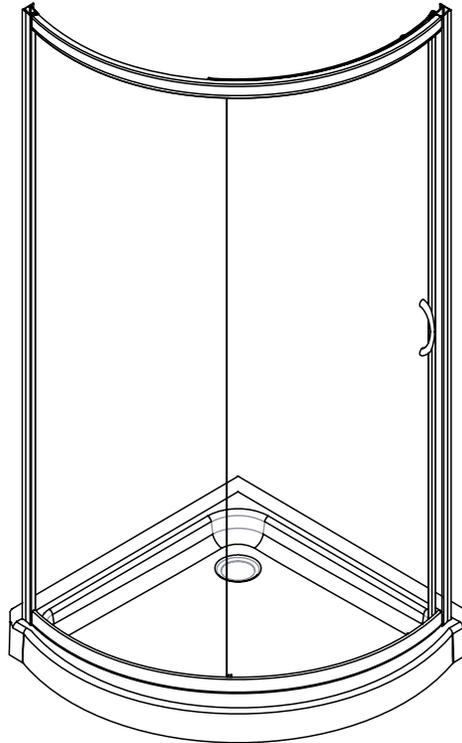


B

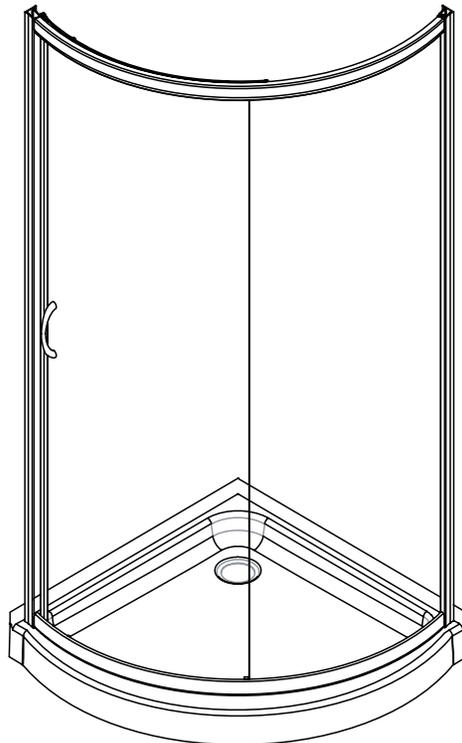


# FRAME ASSEMBLY

**A** 01

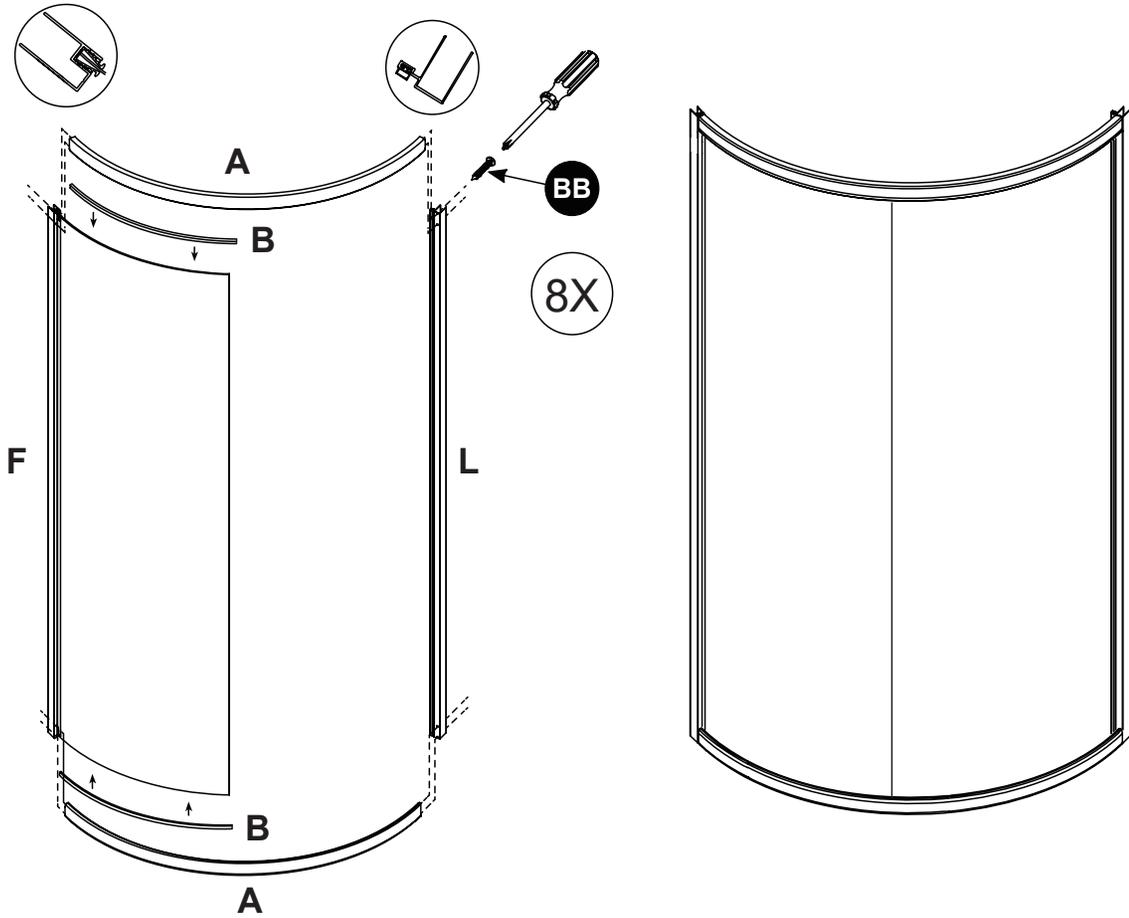


# FRAME ASSEMBLY CONTINUED

**A** 02

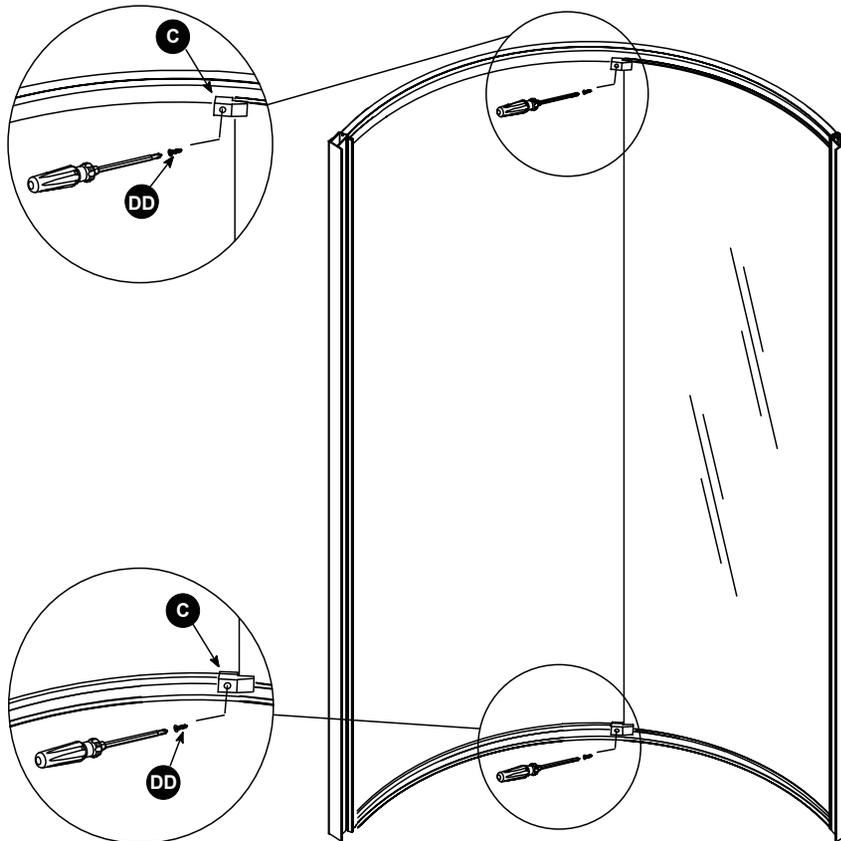


# FRAME ASSEMBLY CONTINUED

A 03

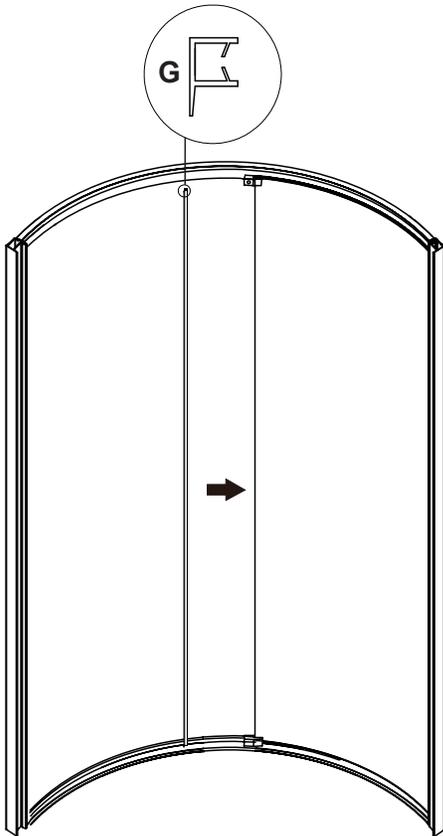


# FRAME POSITIONING

A 04

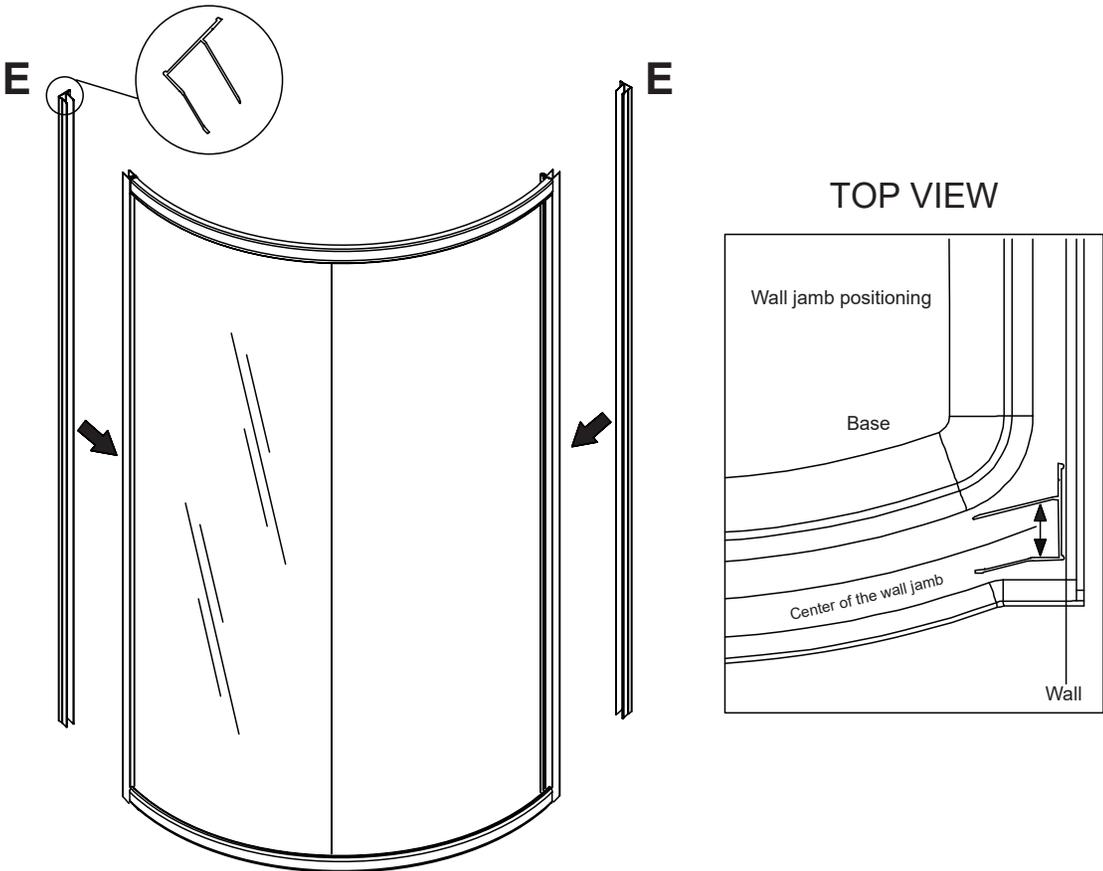


# FRAME POSITIONING CONTINUED

A 05

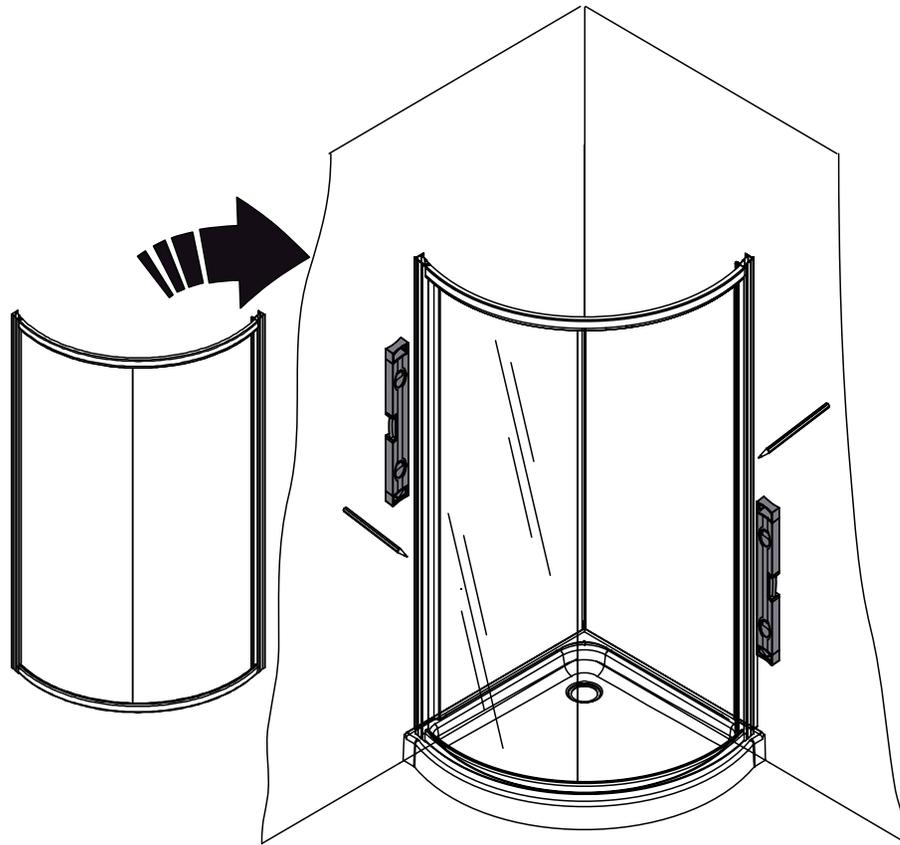


# FRAME POSITIONING CONTINUED

A 06

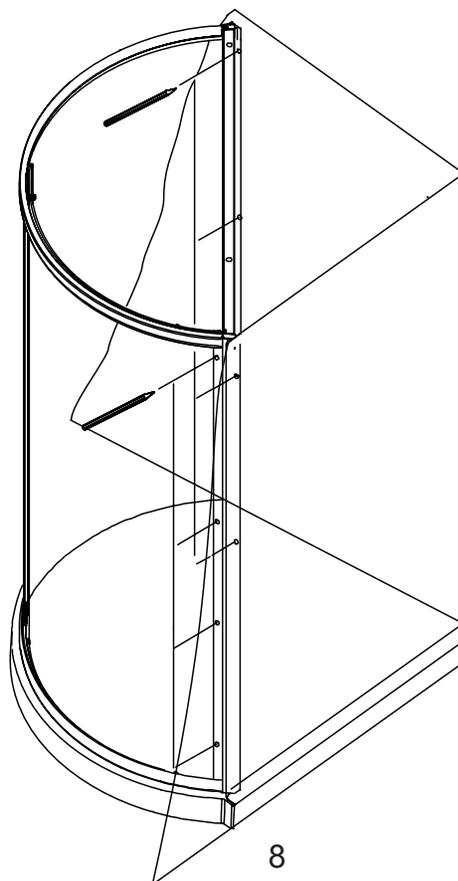


# FRAME POSITIONING CONTINUED

A 07

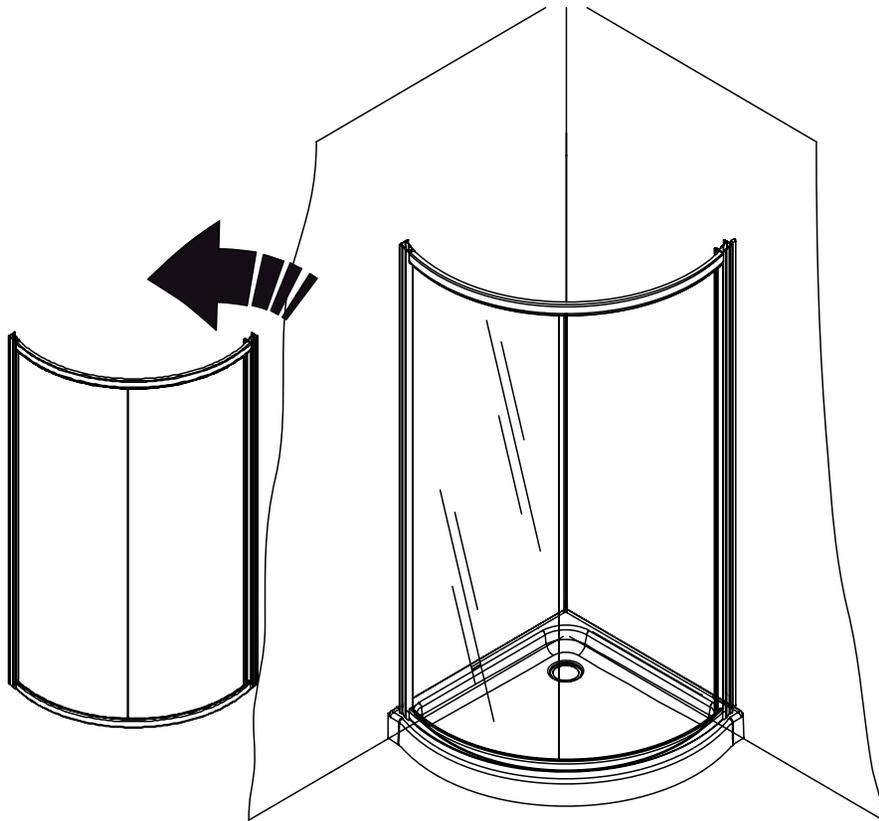




# FRAME INSTALLATION

A 08

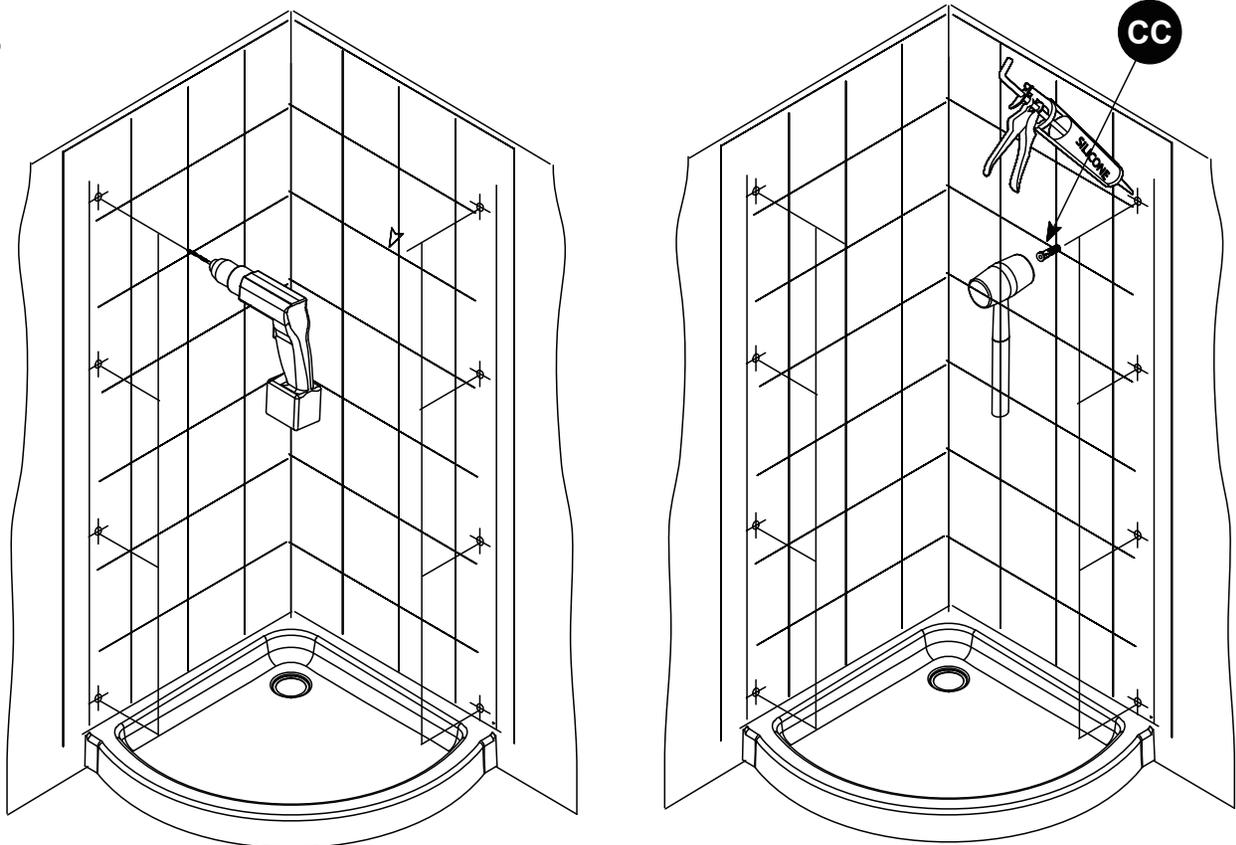


# FRAME INSTALLATION CONTINUED

**A** 11

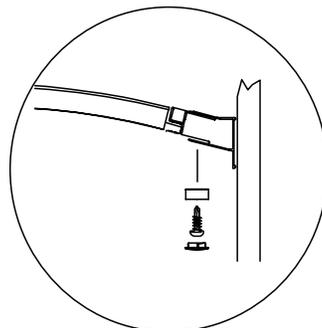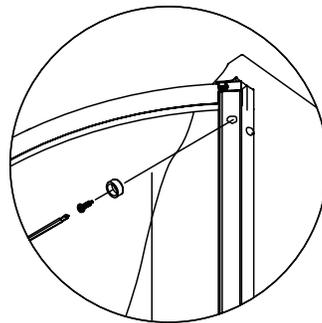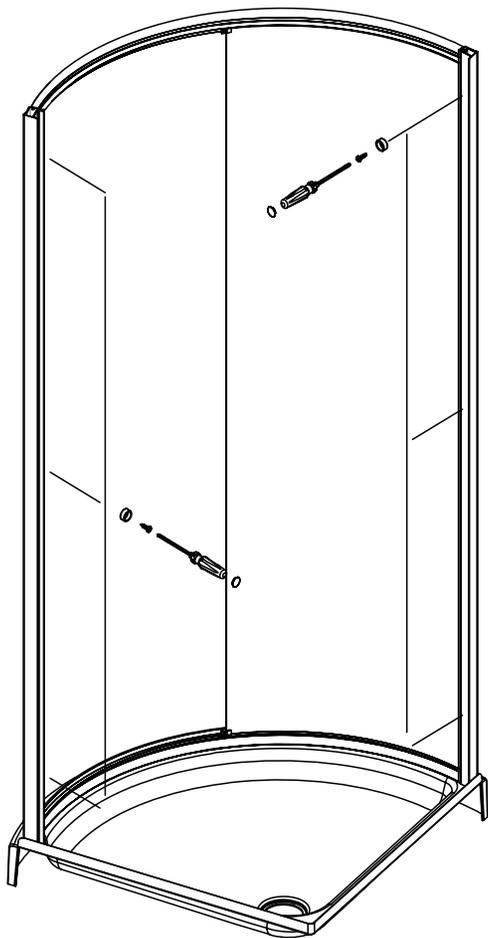


**6X**

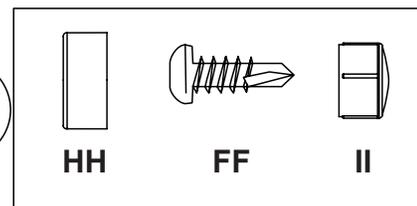

# DOOR INSTALLATION


**A** 12

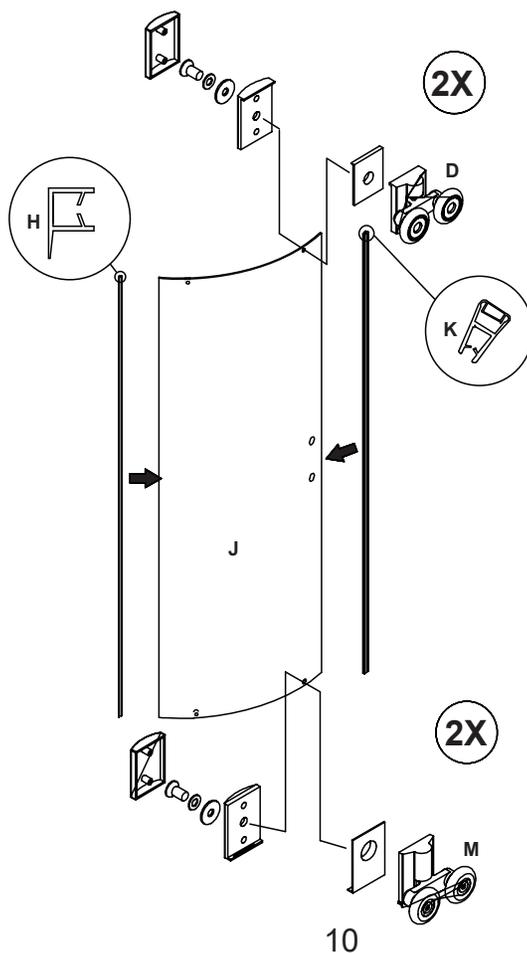

Note:  
Assemble the door  
wheel loosely


# DOOR INSTALLATION CONTINUED

**A** 13

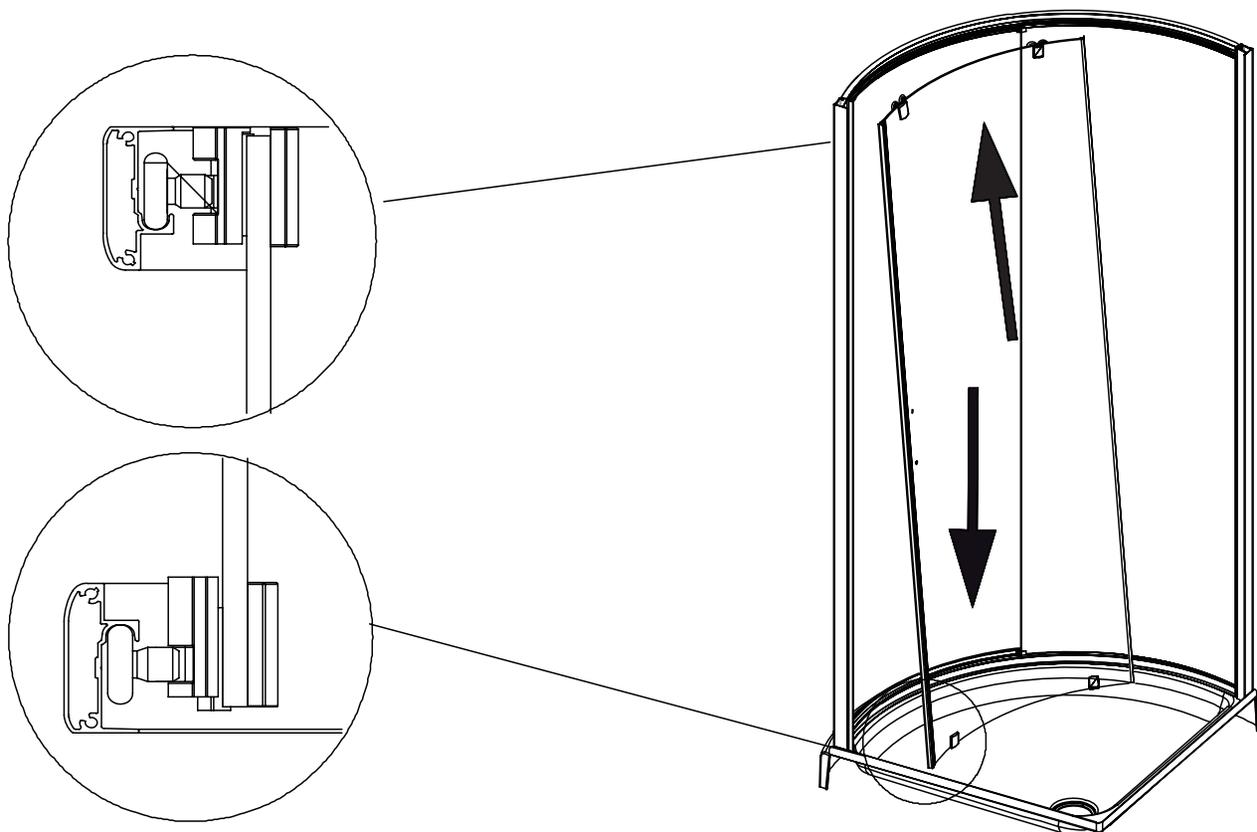


# DOOR INSTALLATION CONTINUED

**A** 14

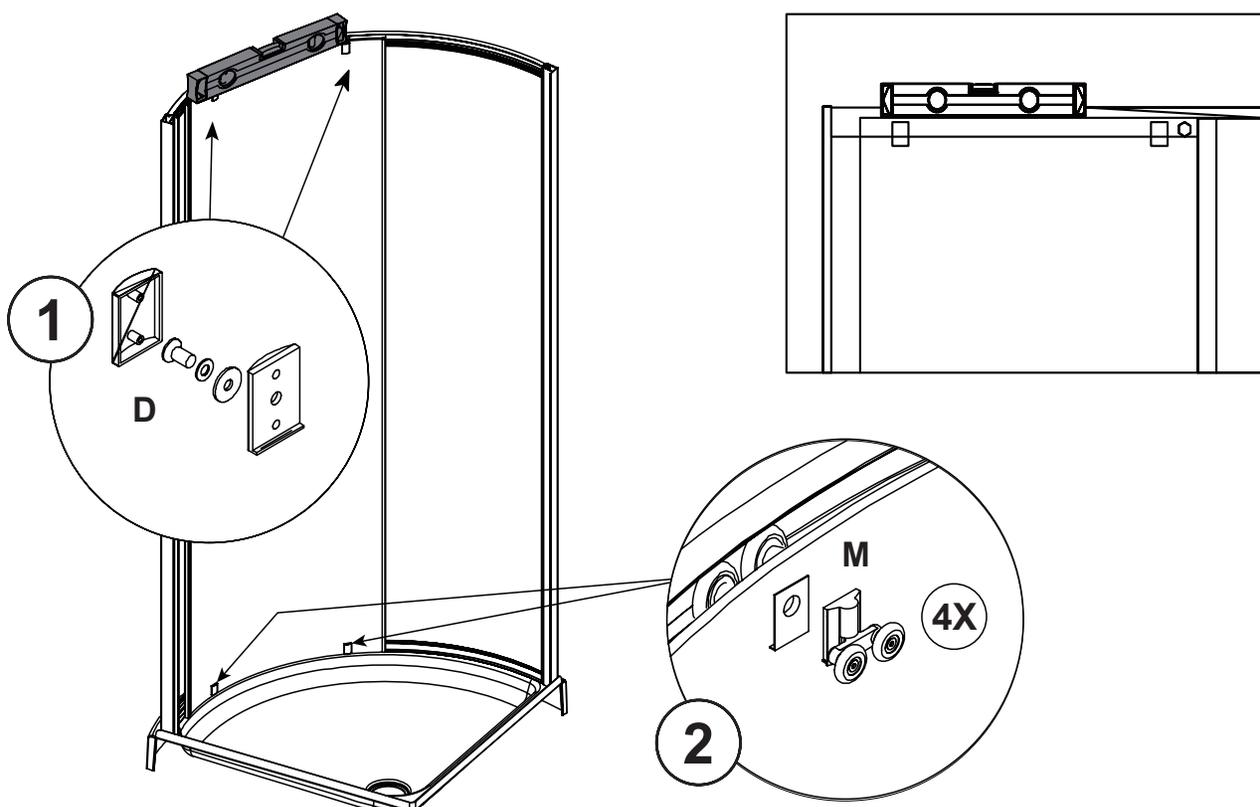

# HANDLE INSTALLATION CONTINUED

**A** 15

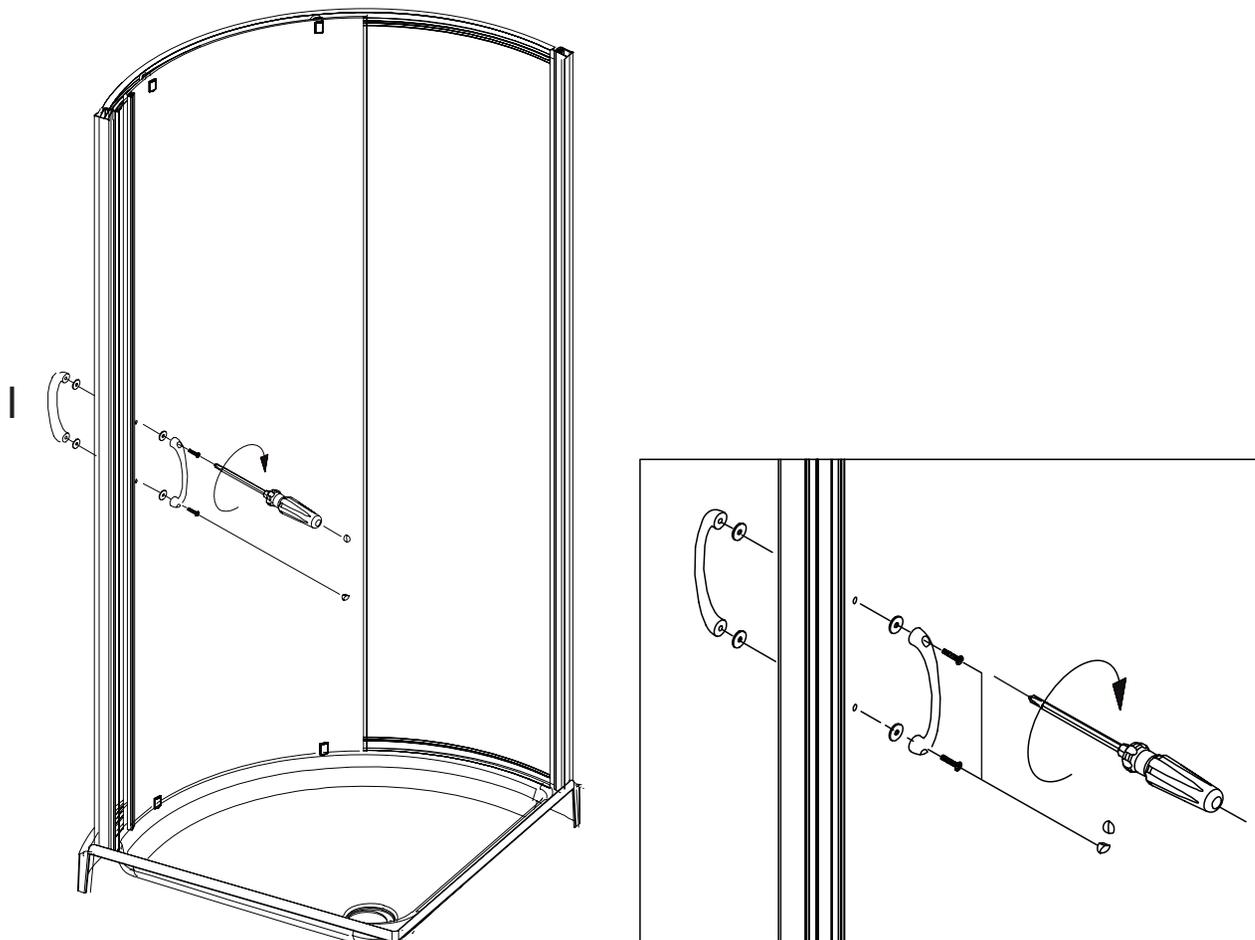

# CAULKING

**A** 16

