


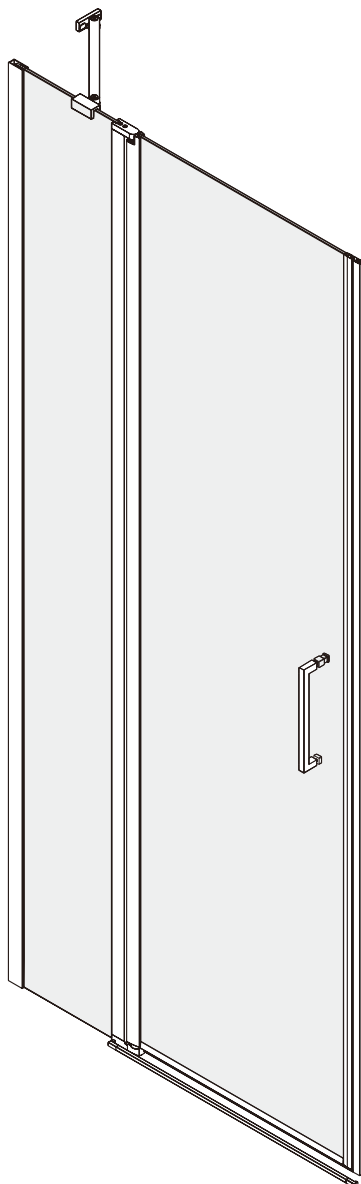

Installation Manual / Manuel d'installation

IMPORTANT

- Thoroughly inspect your product before proceeding with the installation.
- The warranty will be void if the product is installed with a conspicuous defect.

CAUTION

- To prevent leaks, silicone must be applied on the outside of the shower.
- Read all instructions carefully before starting the installation.
- Save this manual for future reference.


IMPORTANT

- Inspecter le produit avant de procéder à l'installation.
- La garantie sera invalide si le produit a été installé avec des défauts apparents.

ATTENTION


- Lors de l'installation, l'application de silicone doit être à l'extérieur de la douche.
- Veuillez lire attentivement ce manuel d'instruction avant de commencer l'installation.
- Conserver ce manuel pour référence ultérieure.

CONTENU / PARTS LIST

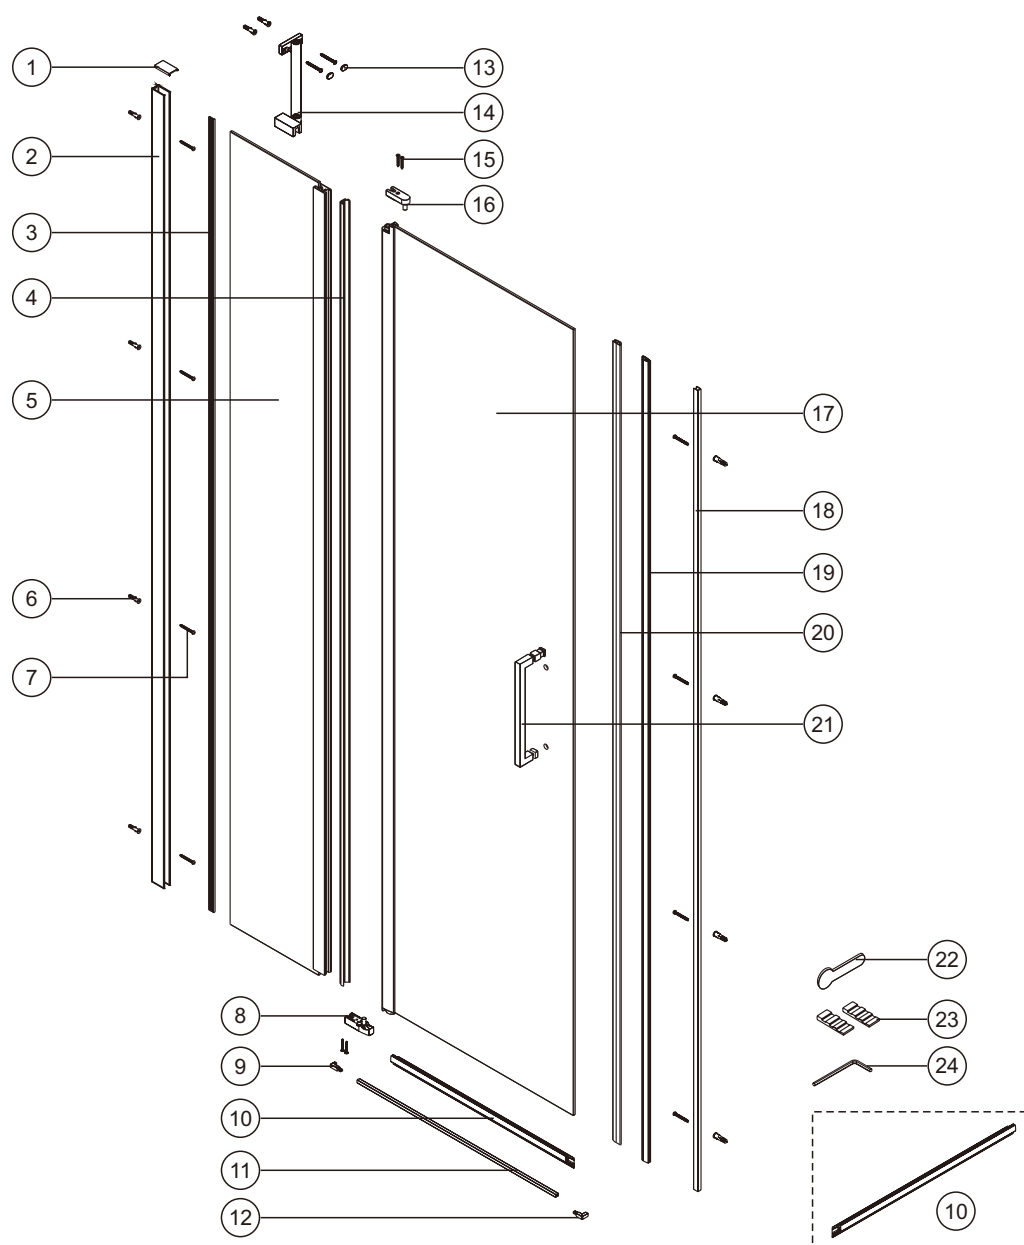


NO	Qty	Description	NO	Qty	Description
1	1	Jamb cap	13	2	Screw cap
2	1	Wall jamb	14	1	Bracing bar
3	1	Squeeze gasket	15	4	Screw ST 3.5X30
4	1	Seal gasket for pivot	16	1	Top pivot base
5	1	Fixed glass panel	17	1	Door glass panel
6	10	Wall anchor	18	1	Wall channel for magnet
7	10	Screw ST 4X40	19	1	Magnet gasket
8	1	Bottom pivot kit	20	1	Magnet gasket
9	1	Threshold cap	21	1	Handle
10	2	Bottom moulding seal	22	1	Installation tool
11	1	Door threshold	23	2	Leveling spacer
12	1	Threshold cap	24	1	Allen key


INSTALLATION EXTRUSION MURALE / WALL JAMB INSTALLATION

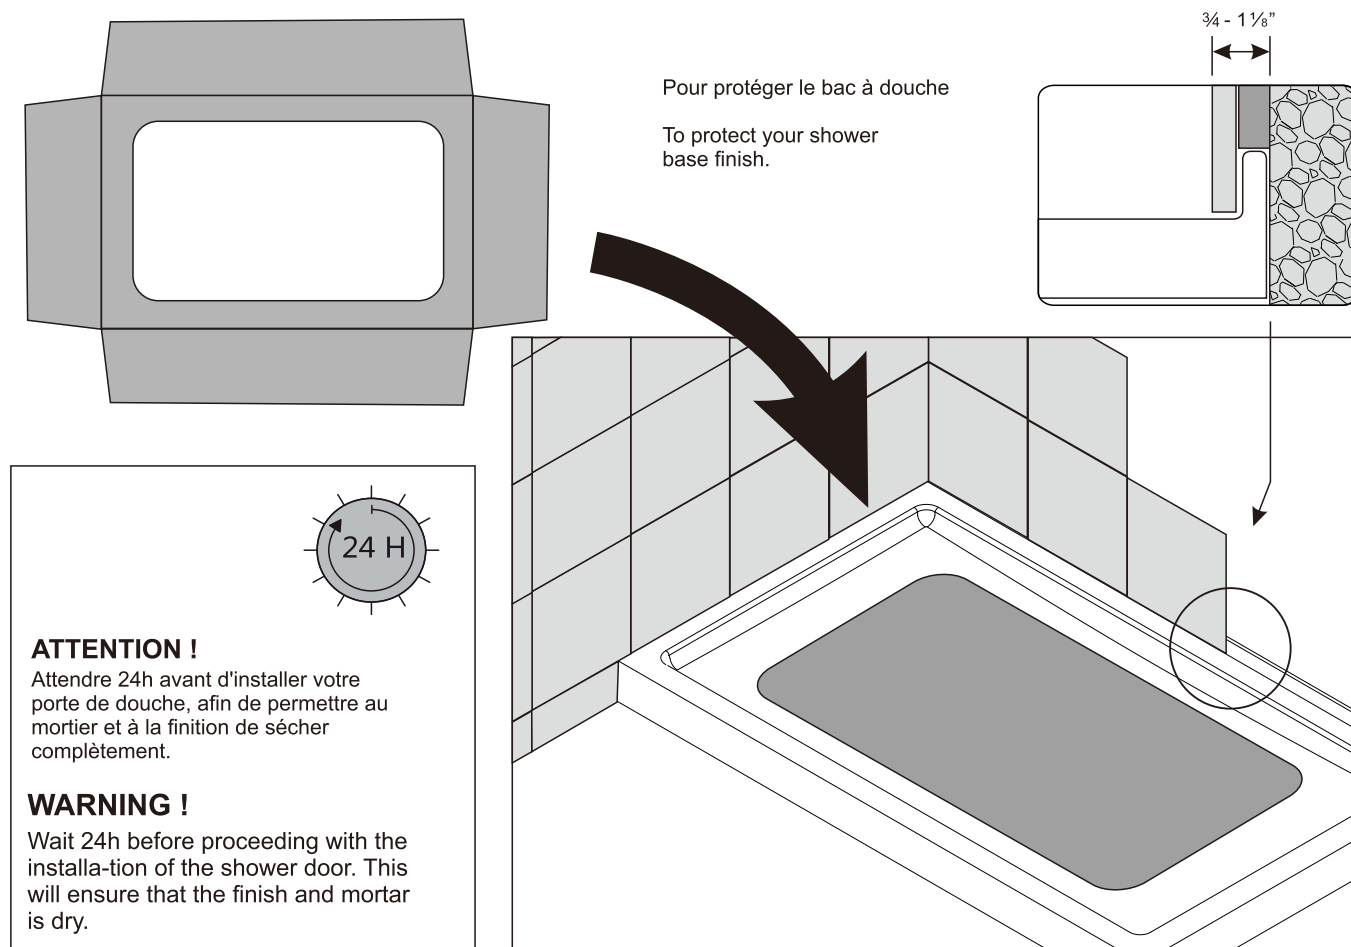


OUTILS ET MATÉRIAUX REQUIS / TOOLS AND MATERIALS REQUIRED

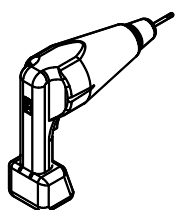


PERCEUSE
DRILL

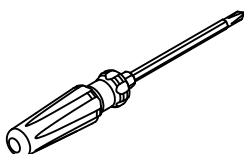

TOURNEVIS
SCREWER

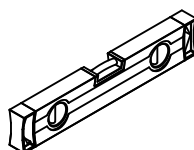


NIVEAU
LEVEL

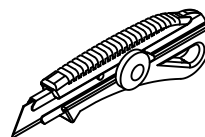


COUTEAU DE PRECISION
PRECISION KNIFE



SILICONE
SILICONE




FORETS: 1/8", 3/16" ET 1/4"
*FORET À MAÇONNERIE
MASONRY DRILL
BITS: 1/8", 3/16" AND 1/4"

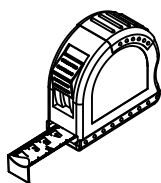

RUBAN À MESURER
MEASURING TAPE



ÉQUERRE
SET SQUARE



CRAYON
PENCIL



MAILLET
Mallet

